


Main Features:

- Automatic deblistering of tablets, pills and capsules
- Patented press-out cassette technology
- Adjustable press-out roll pressure
- Wide range of blister sizes (minimum 50 x 30 mm; maximum 140 x 110 mm)
- Magazine for holding up to 60 blisters, depending on the thickness of the blisters
- Very easy to clean

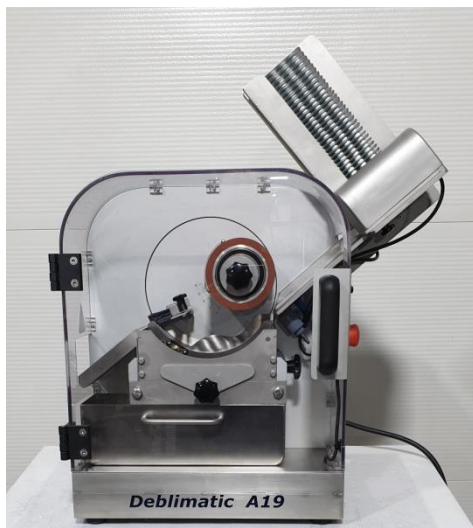

Front view of the Deblimatic® A 19

The patented cassette type press-out system is at the core of the Deblimatic® deblistering machines. The machine comes with two cassettes.

The Deblimatic® A 19 is supplied with two press-out rolls with different rubber hardnesses. The softer of the two rolls is particularly suitable for the deblistering of capsules without damaging the capsule.

Operational performance data:

The Deblimatic® A 19 has two selectable deblistering speeds, i.e.:

- 25 blisters per minute for blisters with capsules
- 40 blisters per minute for blisters with tablets and pills

Press-out percentage: > 99%

Electrical connection data:

Voltage: 220 – 240 Volt, 50Hz

Power rating: 250 W

Fuse: 16 Amp automatic

Operating temperature range: 10 – 30 °C

Dimensions: L x W x H = 600 x 450 x 700 mm

Weight: approx. 35 kg



Address : Willem Barentszstraat 7d
7825 VZ Emmen, The Netherlands

Tel. : +31 (0)591 391 064

Mobile : +31 (0)626 672 930

www.langemaat.eu

Bank : Rabobank Emmen

IBAN : NL17 RABO 0318 0837 01

Reg.-number : 75248123

VAT-number : NL8602.07.213.B01

info@langemaatontwikkelingentechniek.nl