

**NEW!**

## Semi-automatic tabletop deblistering machine

**Deblimatic® SA18**

Semi-automatic deblistering

### Main Features:

- Deblistering of tablets, pills and capsules
- Patented press-out cassette technology
- Adjustable press-out roll pressure
- wide range of blister sizes (minimum 50 x 30 mm; maximum 140 x 110 mm)
- Very easy to clean

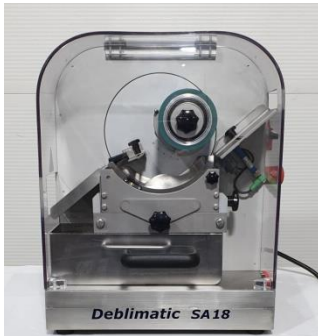


Image of the Deblimatic® SA18 with the cover in the closed position



Image of the Deblimatic® SA18 with the cover in the opened position

Additional cassettes can be ordered separately. The Deblimatic® SA18 is supplied with two press-out rolls with different rubber hardnesses. The softer of the two rolls is particularly suitable for the deblistering of capsules without damaging the capsule.

### Operational performance data:

The Deblimatic® SA18 has two selectable deblistering speeds, i.e.:

- 20 blisters per minute for blisters with capsules, and
- 30 blisters per minute for blisters with tablets and pills

Press-out percentage: > 99%

### Electrical connection data:

Voltage: 220 – 240 Volt, 50Hz

Power Rating: 200 W

Fuse: 16 Amp automatic

Operating temperature range: 10 – 30 °C

Dimensions: L x W x H = 375 x 400 x 450 mm

Weight: approx. 30 kg

The patented cassette type press-out system is at the core of the Deblimatic deblistering machines. The machine comes with one cassette.



Address : Willem Barentszstraat 7d  
7825 VZ Emmen, The Netherlands

Tel. : +31 (0)591 391 064

Mobile : +31 (0)626 672 930

[www.langemaat.eu](http://www.langemaat.eu)

Bank : Rabobank Emmen

IBAN : NL17 RABO 0318 0837 01

Reg.-number : 75248123

VAT-number : NL8602.07.213.B01

[info@langemaatontwikkelingetechniek.nl](mailto:info@langemaatontwikkelingetechniek.nl)